


**Escali**<sup>TM</sup>

User Manual

**Siberta** Pocket Scales

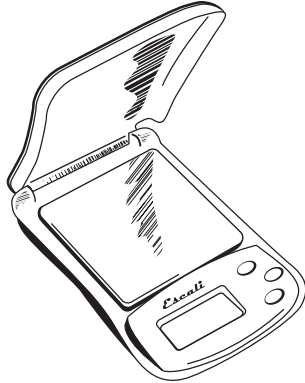

www.Escali.com

#### How to clear the "Tare" feature

- 1) Remove all items from the platform.
- 2) Press the "OFF" key.
- 3) Press the "ON" key.

Now the scale is reset to "0.0" and the weight of all items on the platform will be displayed.

#### Calibration

For best results, calibrate the scale at regular intervals. Use the following calibration weight: 50 gram for PR50. 100 gram for PR120, PR200 and PR300. 200 gram for PR500

- 1) Allow the scale to warm up and stabilize for two minutes before starting the calibration procedure.
- 2) When the scale is turned off, press and hold the "ON/TARE" key for several seconds until the LCD shows the random value.
- 3) Press the "ON/TARE" key again, the LCD will show "ZEro" and then the calibration weight.
- 4) Gently place the weight on the scale and wait 3 seconds. Press the "ON/TARE" key, the LCD will show "CAL" and then "PASS".
- 5) Remove the calibration weight and turn the scale off. Calibration is now complete.

**Weight Modes:** gram, ounces, pennyweight and Troy ounces

**Increments:** PR50: 0.01 gr, 0.001 oz, 0.01 dwt and 0.001 ozt. Other PR models: 0.1 gr, 0.01oz, 0.1 dwt and 0.01 ozt (Troy ounces)

#### How to weigh

- 1) Make sure your scale is at normal room temperature.
- 2) Press the "ON/TARE" key. All display segments will appear for approximately 3 seconds before resetting to zero.
- 3) Press the "UNIT" key to select unit mode.
- 4) Place item slowly on the platform.

**Please Note:** This scale is a precision instrument. The read-out may go up or down slightly. This can be caused by air currents or vibrations. Stable weighing is achieved when the display remains fixed for 3 seconds.

If the scale does not return to "0.0" after removing the item from the platform, simply press the "ON" key. This will reset the scale to "0.0".

#### How to use the "Tare" feature

This feature allows you to obtain the exact weight of an item in a container on the scale platform

- 1) Press the "ON/TARE" key.
- 2) Press the "UNIT" key to select the unit mode.
- 3) Place the container, without the item, slowly on the platform.
- 4) Press the "ON/TARE" key again. The weight of the container will be removed.
- 5) Slowly add the item to the container. The display will show the weight of the item only.

#### Capacity:

**PR50:** 50 gr / 1.8 oz    **PR120:** 120 gr / 4.3 oz

**PR200:** 200 gr / 7.0 oz    **PR300:** 300 gr / 11 oz

**PR500:** 500 gr / 18 oz

**Warranty:** Manufacturer's five (5) year warranty, see www.escali.com for details.

**Auto Shut Off:** Turns off after 2 minutes of non-use

#### Additional Information

- 1) Weighing items over the maximum weight capacity will cause an "E" error to display. Immediately remove overweight items to avoid causing damage to your scale
- 2) Reset the scale if it fails to weigh items placed on the platform, or when a series of dotted lines appears on the display; Turn the scale off, and then turn it on again.
- 3) This scale is not waterproof. Do not expose to moisture.
- 4) As this scale is a precision instrument, it must be handled with extreme care. Avoid rough treatment, shaking and vibration.
- 5) Do not disassemble this scale or the warranty will be void.
- 6) The display value may be affected by electromagnetic disturbances. If this occurs, move the device that is causing the disturbance and turn the scale off and restart.
- 7) Replace the battery when the display reads "LO".

Escali's liability is limited to two (2) times the cost of the product

© Copyright Escali LLC, 2003

Dillon/Quality Plus, Inc.  
Distributor/Sales/Service/Calibration  
Email:sales@dqplus.com  
Web: http://www.dqplus.com/  
Dillon/Quality Plus, Inc.  
3501 N.E. Kimball Dr.  
Kansas City, MO. 64161  
Phone: 800-493-2263  
Phone: 816-453-7600  
FAX: 816-453-7677